



TCF-Leo Low Profile Focuser Installation

Step-by-Step Instructions for Installing the TCF-Leo Focuser on any telescope Optical Tube Assembly (OTA).

The TCF-Leo low profile focuser is a thin, robust focuser controlled by Optec's FocusLynx control system. FocusLynx features PC connection via serial, USB, or Ethernet with options to add a second focuser, hand controller, or 802.11 b/g WiFi connectivity.

Introduction

TCF-Leo measures only 1-1/4" at the full IN position with 0.35" (8.9mm) of overall focuser travel. At the midpoint of travel, TCF-Leo consumes only 36.2mm of the telescope OTA's available back-focus. TCF-Leo features a true 3-inch drawtube with 76.2mm of clear aperture.



In operation, the TCF-Leo delivers extremely fine resolution of 0.08 micron per step. In the Hi-Speed mode Leo can achieve step rates of 2,400 steps per second. Normal Hi-Torque operating speed tops out at a respectable 1,400 steps per second yielding a full IN to full OUT time just over a minute. Like all TCF Temperature Compensating Focusers, a precision digital temperature sensor is included to mount directly on to the telescope OTA for the most precise temperature measurements available. An RJ45 8P8C socket connector on the focuser body allows any Cat-5e Ethernet cable to connect to the FocusLynx control hub.

Standard Optec Interfaces

The telescope side interface for the TCF-Leo is Optec's standard 3.6-inch dovetail system known as the OPTEC-3600. The camera side interface is a 3-inch bore that allows any OPTEC-3000 adapter to be inserted. Optional OPTEC-3000 adapters include a precision 2-inch receiver, T-thread, STL-thread and others.



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us



TCF-Leo Low Profile Focuser with FocusLynx



TCF-Leo Package Contents

Confirm the contents of your TCF-Leo package with FocusLynx control hub, power supply, cables, and tools. The package should contain the following items:



- TCF-Leo low profile focuser,
- FocusLynx control hub,
- Precision temperature probe,
- USB/Serial communication cable,
- Cat-5e or Cat-6 Ethernet cable x 2
- 12VDC power supply with cord,
- 5/64" T-handle hex key tool.

The second Cat-5e Ethernet cable is for a network connection using the Network port on the bottom of the FocusLynx hub. These cables are interchangeable with any Cat-5e or better cable.

Focuser Drawtube Variants

The standard TCF-Leo focuser includes our low-profile 3-inch drawtube. The standard drawtube can accept our OPTEC-3000 camera adapters. The drawtube can be removed and replaced with other drawtubes or the TCF-Leo can be ordered in one of the variants below with the desired drawtube pre-installed.



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us



TCF-Leo Low Profile Focuser with FocusLynx



#19741 – Extended Height TCF-Leo Focuser

With a short travel range of 8.9mm, some TCF-Leo installations fall short of the desired back-focus range by just a few millimeters. The Extended Height drawtube is ¼-inch (6.4mm) longer than the standard drawtube to provide just enough extension to better center the optimal focal point within the available focuser travel range.

#19742 – TCF-Leo with Optec-DSI 3.5” Drawtube

For installations where even more extension is required to reach focus, the #19742 variant provides even versatility. The Optec-DSI 3.5” x 24tpi threaded drawtube acts as a female receiver for any of the DSI 3.5” extension tubes which are similar to the Astro-Physics AP2.7 extension tubes, but offer more clear aperture. A variety of camera side adapters from the DSI 3.5 standard are available to complete your imaging setup.

Additional details can be found here: https://www.optecinc.com/astronomy/dsi_3.5_adapters.htm. The Optec-DSI 3.5” Drawtube is also available separately as Optec stock item #19743.

#19744 – TCF-Leo Split-Clamp Drawtube

This variant of the TCF-Leo replaces the standard 3-inch receiver drawtube (which has three oval-point setscrews to hold the camera adapter) with a special split-clamp 3-inch receiver. This version is specially designed to accept large 3-inch Wynne Correctors and other lenses that require a specific spacing from the primary mirror. Camera packages would be attached to the Wynne Corrector and the entire imaging system can be adjusted for optimal spacing inside the TCF-Leo drawtube.

Package Options

Each variant of the TCF-Leo described above is also available in packages with Hand Control and FocusLynx WiFi options described below.

Hand Controller Option -HC

For visual users, a special kit price is available that includes the #19695 FocusLynx Hand Controller at a discounted price. The Hand Controller provides an easy to use, vibration-free method of focusing the telescope. An embedded rotary encoder switch allows one-hand fine focus control while using an eyepiece. Additional details are available online at:

<http://www.optecinc.com/astronomy/catalog/focuslynx/19695.htm>

WiFi Option for FocusLynx -WiFi

This package includes the #19755 FocusLynx 802.11b/g WiFi wireless Ethernet option pre-installed. See <https://www.optecinc.com/astronomy/catalog/focuslynx/19755.htm> for additional details.



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us



TCF-Leo Low Profile Focuser with FocusLynx



Installation Procedure: Step-by-Step

Step 1 – Identify OTA mount


To install the TCF-Leo, you first need to identify the mounting surface on the telescope OTA. For example, the Celestron EdgeHD C-11 and C-14 OTA's share a common large thread. Celestron's thread is a coarse approximately 3.29" x 16 tpi thread. You may need to remove the smaller 2" x 24 tpi thread adapter to reveal the larger thread.

Contact Optec Sales (sales@optecinc.com) or check the Optec website (<http://www.optecinc.com/astromy/catalog/adapters/optec-3600/default.htm>) for a list of suitable mounts from the OPTEC-3600 line of telescope adapters. For the Celestron scopes, Optec stock item #17803 converts the large thread to the Optec 3.6-inch dovetail standard.



Step 2 – Attach Telescope Mount

With a suitable 3600 telescope mount in place, slip the TCF-Leo over the mount. You may need to loosen the three setscrews back slightly if the focuser does not fully seat against the mount.

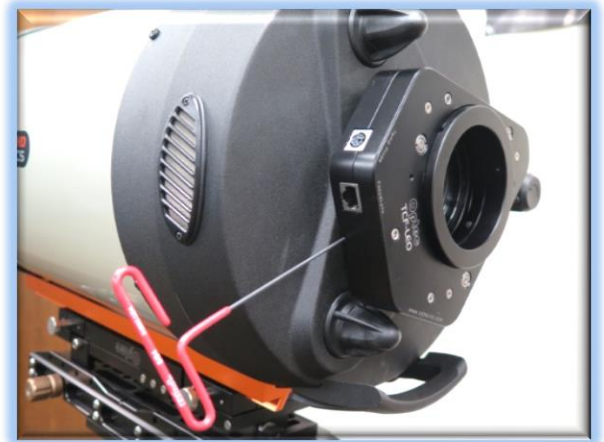

Step 3 – Align and Tighten

Align the focuser body for suitable clearance. Tighten three setscrews using the 5/64" T-handle hex key tool. Be sure to tighten each setscrew securely against the dovetail on the OPTEC-3600 telescope mount.



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us



TCF-Leo Low Profile Focuser with FocusLynx

Step 4 – Identify Camera Mount

The TCF-Leo has a standard 3-inch receiver and can accept any of the OPTEC-3000 camera-side adapters. Identify the required mechanical interface for your filter wheel, off-axis guider, ONAG, or camera face (whichever is first in line) and consult the Optec website or Precise Parts for a suitable mount. (<https://goo.gl/3e5JeF>)



Step 5 – Move Drawtube OUT

To gain access to the three setscrews in the focuser drawtube, you will need to move the focuser to the full OUT position, or 112,000 steps. Skip down to [FocusLynx Software Setup](#) below if you do not see the setscrew hex heads at the end of the drawtube.



Step 6 – Tighten Camera Adapter

With the drawtube fully extended, insert the OPTEC-3000 3-inch camera adapter into the drawtube ensuring it seats tightly. You may need to loosen the three setscrews slightly to ensure the mount seats properly. Rotate the camera package for best orientation and tighten each setscrew securely.



Step 7 – Connect Temp Probe and Hub

Now you can insert the temperature probe into the 6-pin DIN socket. Use the thermal foam to attach the temperature probe to the side of your OTA for best results. Next, attach one end of the Cat-5e Ethernet cable into the RJ45 socket labeled FocusLynx. The other end of this cable will connect to the Focuser 1 port on your Focus Lynx hub.



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us



TCF-Leo Low Profile Focuser with FocusLynx




FocusLynx Software Setup

Your TCF-Leo focuser is now installed. Consult the **FocusLynx Quick Start Guide** to install the FocusLynx Commander software. Visit <http://www.optecinc.com/astrometry/downloads/focuslynx.htm> for the latest version of FocusLynx Commander and ASCOM driver. Once installed, you should configure FocusLynx Commander for your new **TCF-Leo**. Configuration within FocusLynx Commander will also configure the ASCOM driver so that the same settings will apply when using auto-focusing software such as Maxim D/L, TheSky X, SGP or FocusMax.

FocusLynx Commander Focuser Type selection

Open the Focuser Setup dialog for Focuser 1 (or Focuser 2 if you have installed the optional second stepper board) and choose the **TCF-Leo** Focuser Type option. Use the slide bar to set for **High Speed** or

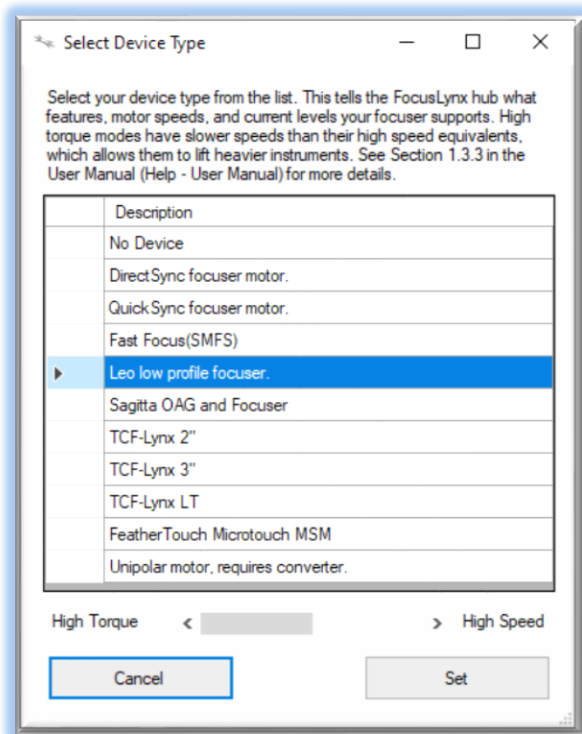

High Torque. With stepper motors, speed and torque typically work inversely. That is, higher speeds will usually result in lower torque. The TCF-Leo **High Torque** option can reliably handle payloads up to 10 kg or about 22 lbs.

If you prefer faster movement from your focuser, move the slider bar for **High Speed** instead. There will be a reduction of available torque but the focuser will typically home under a minute. The recommended maximum payload for the **TCF-Leo Hi-Speed** device type is 5 kg or 11 lbs.

Homing Procedure

Upon power up, the FocusLynx controller will automatically home the focuser by moving all the way in to position 0. A limit switch will be triggered which immediately begins an outward travel to the last parked position.

At any time you may wish to re-home the focuser and move to Center for coarse focus adjustment. If you do not have enough travel, you will need to add or remove spacers between the focuser and camera package or between the telescope and the TCF-Leo focuser.



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us



TCF-Leo Low Profile Focuser with FocusLynx



Set the Position Units

In the main form of the FocusLynx Commander window, you may left-click directly on the red Position digital read-out to toggle units between Steps, Microns, and Millimeters. Note that only the step count is passed through to the ASCOM driver. The iFocuserV2 standard for ASCOM absolute focusers relates all focuser movements to actual step counts with the higher level client responsible for making the conversions to real-world measurements. FocusLynx Commander extends the property to easily convert the units to mm and microns.

Set the Temperature Units

Like the Position units, you can left-click directly on the red Temperature display at any time to toggle through degrees Celsius, Fahrenheit, and Kelvin.

Step Range

The TCF-Leo has a fixed number of total steps. Full IN is at step position 0 while full OUT is at step position 112,000. Upon initial power up the focuser will move to position 0 and then outward to the last parked position prior to power down. We recommend that the imaging package be configured initially at the focuser center position (click the Center button) of 56,000. Once at center, adjust your telescope's coarse focus knob (if available) or use spacer rings to achieve best focus. This ensures your normal focal travel is within the available travel range for the TCF-Leo drawtube which is about 8.9mm.

Temperature Compensation

TCF-Leo includes a precision temperature probe for temperature compensation. Within FocusLynx Commander click File – Temp Comp Wizard to automatically determine the “TC” or Temperature Coefficient for your particular telescope configuration. After completing the wizard, turn on temperature compensation by selecting “On” just above the Sync button. The FocusLynx controller will automatically adjust the telescope focus for changing temperatures.

Third-Party Software

Visit the Optec website for the additional information describing FocusLynx configurations for ASCOM clients such as **FocusMax** and **Maxim D/L**, as well as non-ASCOM software such as Software Bisque's **TheSky X** native X2 drivers for FocusLynx.



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us



TCF-Leo Low Profile Focuser with FocusLynx



YouTube Channel

Optec is developing videos for installation and configuration of our many products for various software packages. Visit our YouTube channel by searching “Optec Inc” or clicking the link below.



<https://www.youtube.com/channel/UCL0J43G-q2SQfZfgeoaLiLA>

Optec User Group

The Optec User Group is now located at Groups.io which provides a forum to communicate with other users of Optec instruments. Other end-users can often provide answers to specific configuration questions and Optec staff routinely follow and answer many questions as well. Click the banner below to subscribe.

Groups.io Your Groups 1 Find or Create a Group Jeff Dickerman

Home Owner

Subscription

Admin 1

Pending 1

Members

Invite

Direct Add

Integrations

Settings

Allases

Optec, Inc. User Group Optec@groups.io

The OPTEC user group exists to promote the proper usage of all of Optec's astronomy and telescope related products.

Group Information

www.optecinc.com

736 Members

748 Topics, Last Post: Jan 6

Started on 10/01/02

Feed

Or visit the Groups.io Optec User Group here: <https://groups.io/g/Optec>.

FocusMax is available through CCDWare - <http://www.ccdware.com/products/focusmax/>

Maxim D/L is copyright Diffraction Limited - <http://diffractionlimited.com/product/maxim-dl/>

TheSky X is offered by Software Bisque - <http://www.bisque.com/>

Sequence Generator Pro by Main Sequence Software - <https://www.mainsequencesoftware.com/>



199 Smith Street · Lowell, Michigan 49331 · U.S.A.
Telephone: 616-897-9351 · Fax: (616) 897-8229 · Toll Free: 888-488-0381
sales@optecinc.com · <http://www.optecinc.com> · www.optec.us